

Remote Control Functions

SYSTEM ON/OFF

Send Power On/Off commands for up to five components at once including DVD Player, TV, Set Top Box, etc.

MENU

Displays the component's Menu.

GUIDE

Displays the program guide listings.

OK/SELECT

Selects highlighted screen options.

SETTINGS

Nonoperational with set top box.

MUTE

Silences audio if programmed to TV.

VOLUME ▲▼

Adjusts audio level if programmed to TV.

FAV

Nonoperational with set top box.

ON DEMAND

Nonoperational with set top box.

BACK ◀/INTERACTIVE ▶

Moves selection back or forward by one program.

M BUTTONS

Nonoperational with set top box.

REPLAY

Replays the previous few seconds of a recorded program.

MY DVR

Displays a list of recorded programs.

DELETE

Replays previous few seconds of a recorded program.

ON-OFF

Nonoperational with set top box.

SWAP

Nonoperational with set top box.

VIDEO SOURCE

Selects video source from available components if programmed with TV.

POWER

Turn DVD Player, TV, Set Top Box, etc. On and Off.

AUX, DVD, AUD, TV, CABLE

Used to select the component to operate and signals remote control activity.

INFO

Displays information about the program currently playing or highlighted in the program guide.

EXIT

Exit from current screen.

PAGE +/-

Accesses pages above or below the information currently displayed.

CURSOR NAVIGATION PAD (▲▼◀▶)

Navigate to and highlight an item from the on-screen choices.

A, B, C, D

Nonoperational with set top box.

CHANNEL ▲▼

Selects the next higher or lower channel.

LAST

Returns to the previously tuned channel.

SKIP

Skips forward a few seconds during a recorded program.

DVR/VCR/DVD KEYS

Performs Whole Home DVR functions if using a Whole Home DVR set top box. Also performs standard VCR and DVD functions if programmed to these components.

NUMBER PAD

Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.

ASPECT/ENTER

Nonoperational with set top box.

PIP CH +/-


Nonoperational with set top box.

MOVE

Nonoperational with set top box.

LIGHT

Press to backlight all keypad buttons.

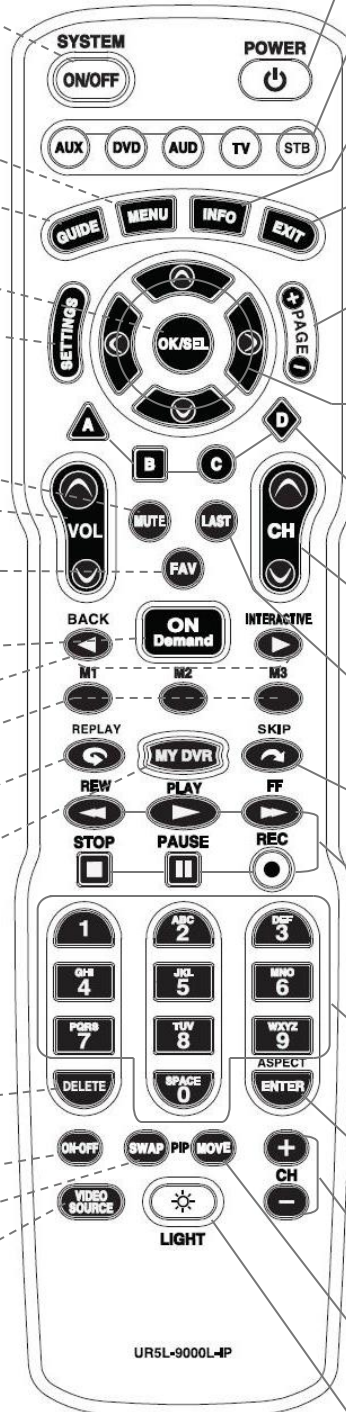

UR5L-9000L-4P